




SUORiN Air Pro
Refillable E-Cigarette

Please save this manual and read it fully before you start using this product as it contains important information.

Length	Width	Height
96mm	45mm	12.7mm




Product Specifications

Coil Resistance	1.0Ω
Cartridge Capacity	4.9mL
Max Output	18W
Charging Current	1000mA
Battery Capacity	930mAh
Material	Zinc alloy + PCTG
Preferable Operating condition	Temperature 10° C - 45° C / 50° F - 113° F Humidity: up to 85% relative humidity
Preferable Storage & Transportation Condition	Temperature 15° C - 25° C / 32° F - 77° F Humidity: 45% ~ 75% relative humidity

E-liquid Filling


Step 1

Open the silicone plug

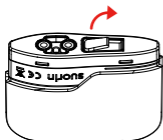

Step 2

Fill the e-liquid.

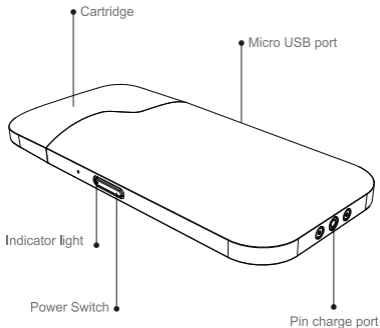

Instructions

1. Pull the silicone plug and fill the cartridge with e-liquid.
Push the silicone plug after finishing filling.
2. Please wait 5-8 minutes after filling e-liquid into a new cartridge and inserting the cartridge into the device before using the device to inhale a puff for the first time.
3. Press the power switch 5 times to turn on/off the device.
4. Use only the charger included with the device to recharge the battery. Please immediately unplug the device once it is fully charged.
5. The intended service life of the cartridge is seven (7) days.
You should replace the cartridge within seven (7) days after first filling it with e-liquid.

Battery Status

Indicator Light	During Using	During Charging
Blinking Red light	Remaining power is less than 10%	Remaining power is less than 10%
Blinking Blue light	Remaining power is 10%-40%	Remaining power is 10%-40%
Blinking Green light	Remaining power is more than 41%	Remaining power is 41%-95%
Steady Green light		The battery is fully charged

Indicator light and vibration feedback

Status	Indicator Light	Vibration Feedback
When vaping time exceeds 5 seconds.	Blink 10 times	Vibrate 1 time
No atomizer detected	Blink 8 times	/
Ohms too low	Blink 5 times	/
Battery low	Blink 3 times	/
Turn on / Turn off device	Blink 3 times	Vibrate 1 time
Insert cartridge	Blink 1 times	Vibrate 1 time
Plugged in charger	Keep blinking	Vibrate 1 time

Notice



1. Let the cartridge stand up-straight for 5-8 minutes to make sure the cotton is fully saturated.
2. This product is only available for Suorin Air Pro cartridges.
3. Dispose of the contents/container in accordance with local laws.
4. It is not recommended for minors and non-smokers.

Troubleshooting

- 1.If the device's battery cannot be charged, check that the charger cord is fully connected to the micro USB port.
- 2.If aerosol is not emitted normally when puffing on the device:
 - a.Confirm that the cartridge is properly in place and tightly connected to the device.
 - b.Confirm the device is under "on" state.
 - c.Confirm that sufficient e-liquid remains in the cartridge. If not, refill the cartridge.
 - d.Confirm that adequate charge remains in the battery. If not, please charge as soon as possible. If the product still does not work, email our customer service center at info@suorin.com for further assistance.

SAFETY WARNINGS:

- Nicotine is a highly addictive and toxic substance. Use care when re-filling and handling this device and refilling the cartridges with e-liquid.
- For use with nicotine-containing e-liquids only. Not for use with high viscosity liquids, waxes, or oils, including THC oils, cannabidiol oils, or other controlled substances. Use with such substances may lead to malfunction of or damage to the product and can result in severe illness or injury.
- When refilling the cartridge with nicotine-containing e-liquid, avoid contact with skin and eyes. If accidental contact with the skin or eyes occurs, rinse with plenty of water and contact a medical professional if irritation occurs or persists.

- Keep the device, all cartridges, and all e-liquid containers out of the reach of children and pets, as this product presents both a poisoning and choking hazard.
- In the event of accidental ingestion of e-liquid, seek help from your local poison control center immediately (in USA region please contact 1-800-222-1222).
- Only charge the device indoors.
- Do not use this device or its cartridges with cartridges, batteries, coils, chargers, or other replacement parts from other manufacturers, as such may lead to an increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death. Use only Suorin-brand compatible replacement parts.
- Do not attempt to disassemble or modify this product in any way, as such may lead to malfunction of or damage to the product, increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death.
- Do not use this product when flammable materials, liquids, or gases, including oxygen, are present or in use.
- Do not use this product if it appears damaged, has been modified, disassembled, or immersed in water.
- When traveling on an airplane or other pressurized environment, remove the cartridge from the device and store it upside-down to avoid leaking of e-liquid from the cartridge.
- Do not use this product with an empty cartridge, as such may result in increased exposure to harmful substances.



HEALTH WARNINGS:

- This product is intended for use by existing cigarette smokers only and should not be used by non-smokers or individuals under the legal age to purchase e-cigarettes or vapor products in their respective jurisdictions.
- This product should not be used by individuals with high blood pressure, heart disease, diabetes, respiratory illness or disease, asthma, gastritis, gastric ulcer, duodenal ulcer, gastro-esophageal reflux disease or who are allergic to any of the listed ingredients.

This product should not be used by pregnant, suspect they may be pregnant or plan to become pregnant, or who are breastfeeding. Exposure to nicotine is harmful to fetal and infant development.

- You should discontinue use of this product and seek the attention of a medical professional if you feel dizzy, faint, or experience difficulty breathing while or immediately after using this product.
- Possible effects of nicotine consumption include: Coughing, headache, irritation of the mouth and throat, (nasal congestion, aphthous ulcers, sore throat, anxiety, insomnia, depression, discomfort, nausea, dry mouth, heartburn, aching joints, diarrhea, meteorism, allergy skin eruption, shortness of breath, labored breath, tightness of the chest, swelling of the face, tongue and lips), feeling thirsty, hiccups, chest pain, fever, irregular or increased heartbeat, dizziness, and sleepiness.

- Possible symptoms of a nicotine overdose include: nausea, salivation, abdominal pain, diarrhea, sweating, headache, dizziness, hearing problems, weakness, and palpitation.

Discontinue use and seek immediate medical attention if you experience any of these symptoms while or shortly after using this product.

Shenzhen Youme Information Technology Co.,Ltd.

E-mail:info@suorin.com


www.suorin.com

Add:201, Building B, Dianlian technology building, Nanhuan Avenue, Mashantou Community, Matian street, Guangming District, Shenzhen





CAUTION

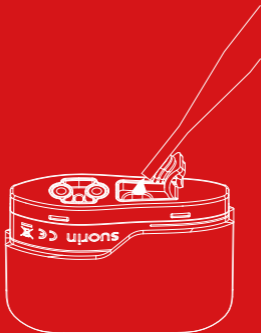

- ⦿ Please let the cartridge stand for 5-8 minutes after filling e-liquid. Make sure the cotton is fully saturated.
- ⦿ It is recommended to change a new coil after filling e-liquid for 5-8 times or within 7 days after e-liquid filling.