





Suorin Air

Device

Please save this manual and read it fully before you start using this product as it contains important information.

User Manual
V2021-12

Length: 64.9mm | Width: 43.7mm | Height: 8mm

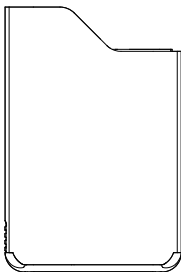

Power Switch

Indicator light

Micro USB port

Product Specifications

Max Output	16W
Charging Current	700mA
Battery Capacity	500mAh
Material	Aluminum
Preferable Operating condition	Temperature 10° C - 45° C / 50° F - 113° F Humidity: up to 85% relative humidity
Preferable Storage & Transportation Condition	Temperature 15° C - 25° C / 32° F - 77° F Humidity: 45% ~ 75% relative humidity

Instructions

1. Insert the cartridge (sold separately) into the device, then move the power switch into the "on" position.
2. Use only the charger included with the device to recharge the battery. Please immediately unplug the device once it is fully charged.

Battery Status

Indicator Light	During Using	During Charging
Blinking Red light	Remaining power is not sufficient Note: If the Red light flickers 5 times, the device should be charged immediately.	Remaining power is less than 50%
Blinking Blue light	Remaining power is sufficient, but the battery is not fully charged	Remaining power is sufficient, but the battery is not fully charged
Steady Blue light	N/A	The battery is fully charged

Troubleshooting

1.If the device's battery cannot be charged, check that the charger cord is fully connected to the micro USB port.

2.If aerosol is not emitted normally when puffing on the device:

a.Confirm that the cartridge (sold separately) is properly in place and tightly connected to the device.

b.Confirm that the power switch is in the "on" position.

c.Confirm that sufficient e-liquid remains in the cartridge (sold separately). If not, refill the cartridge (sold separately).

d.Confirm that adequate charge remains in the battery.

If not, please charge as soon as possible.

If the product still does not work, email our customer service center at info@suorin.com for further assistance.



SAFETY WARNINGS:

- Nicotine is a highly addictive and toxic substance. Use care when re-filling and handling this device and refilling the sold separately with e-liquid.
- When refilling the cartridge (sold separately) with nicotine-containing e-liquid, avoid contact with skin and eyes. If accidental contact with the skin or eyes occurs, rinse with plenty of water and contact a medical professional if irritation occurs or persists.

- Keep the device, all cartridge (sold separately), and all e-liquid containers out of the reach of children and pets, as this product presents both a poisoning and choking hazard.
- In the event of accidental ingestion of e-liquid, seek help from your local poison control center immediately at 1-800-222-1222.
- Only charge the device indoors.
- Do not use this device with any other charger or cable other than those provided with this product or UL-listed charging sources to charge this product as such may lead to malfunction of or damage to the product, increase risk of explosion or fire, and can result in severe illness, injury, or death. Charge the device by connecting it to a computer or a UL listed USB wall charger.
- Do not use this device or its cartridges with cartridges, batteries, coils, chargers, or other replacement parts from other manufacturers, as such may lead to an increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death. Use only Suorin-brand compatible replacement parts.

- Do not attempt to disassemble or modify this product in any way, as such may lead to malfunction of or damage to the product, increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death.
- Do not use this product when flammable materials, liquids, or gases, including oxygen, are present or in use.
- Do not use this product if it appears damaged, has been modified, disassembled, or immersed in water.
- When traveling on an airplane or other pressurized environment, remove the cartridge from the device and store it upside-down to avoid leaking of e-liquid from the sold separately.
- Do not use this product with an empty sold separately, as such may result in increased exposure to harmful substances.



HEALTH WARNINGS:

- This product is intended for use by existing cigarette smokers only and should not be used by non-smokers or individuals under the legal age to purchase e-cigarettes or vapor products in their respective jurisdictions.

- This product is not intended to be used to treat, diagnose, or cure any disease, condition, or ailment, has not been evaluated by the FDA or any other health or regulatory authority for use as a nicotine replacement therapy, and is not marketed for use as such. This product should not be used simultaneously with other sources of nicotine, including FDA-approved nicotine replacement therapies, as such may lead to an increased risk of nicotine addiction and/or dependence.
- This product should not be used by individuals with high blood pressure, heart disease, diabetes, respiratory illness or disease, asthma, gastritis, gastric ulcer, duodenal ulcer, gastro-esophageal reflux disease or who are allergic to any of the listed ingredients.
- **This product should not be used by women who are pregnant, suspect they may be pregnant or plan to become pregnant, or who are breastfeeding. Exposure to nicotine is harmful to fetal and infant development.**
- You should discontinue use of this product and seek the attention of a medical professional if you feel dizzy, faint, or experience difficulty breathing while or immediately after using this product.

- Possible effects of nicotine consumption include:
Coughing, headache, irritation of the mouth and throat, (nasal congestion, aphthous ulcers, sore throat, anxiety, insomnia, depression, discomfort, nausea, dry mouth, heartburn, aching joints, diarrhea, meteorism, allergy skin eruption, shortness of breath, labored breath, tightness of the chest, swelling of the face, tongue and lips), feeling thirsty, hiccups, chest pain, fever, irregular or increased heartbeat, dizziness, and sleepiness. **Seek the advice of a medical professional if you experience any of these symptoms.**
- Possible symptoms of a nicotine overdose include:
nausea, salivation, abdominal pain, diarrhea, sweating, headache, dizziness, hearing problems, weakness, and palpitation. **Discontinue use and seek immediate medical attention if you experience any of these symptoms while or shortly after using this product.**

Shenzhen Youme Information Technology Co.,Ltd.

E-mail:info@suorin.com

www.suorin.com

Add:Qianhai Complex A201, Qianwan Road 1, Qianhai
Shenzhen-Hong Kong Cooperation Zone, Shenzhen.



Sale only allowed in the United States