

SUORIN

AIR HYBRID POD



Please filling the
e-liquid before
using the device

USER MANUAL


V2023-4

RE-FILLED UP TO 8 TIMES



**Please save this manual and read it fully before you
Start to use this product as it contains important
information.**

Length	Width	Height
75mm	32.3mm	13.7mm

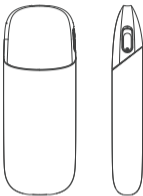

Product Specifications

Coil Resistance: 1.0 Ω

Cartridge Capacity: 2.8mL

Max Output: 14W

Charging Current: 650 \pm mA

Battery Capacity: 600mAh

Material: Aluminum alloy + PCTG

Preferable :Temperature 10 $^{\circ}$ C - 45 $^{\circ}$ C /
50 $^{\circ}$ F - 113 $^{\circ}$ F

Operating condition:

Humidity:up to 85% relative humidity

Preferable Storage &

Transportation Condition:

Temperature 15 $^{\circ}$ C - 25 $^{\circ}$ C /

32 $^{\circ}$ F - 77 $^{\circ}$ F

Humidity:

45% - 75% relative humidity

Operation Guide

How to filling


Step 1: Open the silicone plug



Step 2: Tilt the product when filling




Step 3: Refill when the e-juice level reaches the min line.

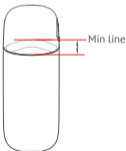

Notice:

1. Let the device static for 5-8 minutes after filling, to make sure the cotton is fully saturated.

Components

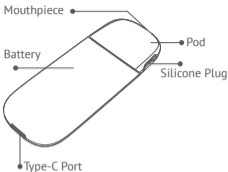

Instructions

- Please wait 5-8 minutes after filling e-liquid into a new device.
- Use a Type-C port cable to recharge the battery. Please immediately unplug the device once it is fully charged.
- Each device can be re-filled up to 8 times

Battery Indicator

Indicator Light	Device Status
Light flicker	During using/ during charging
Blinking 2 times	Vaping time exceeds 10 seconds
Blinking 5 times	Low resistance/ overcurrent
Blinking 10 times	Undervoltage
Indicator Light on	Finished charging

Notice: When the device battery is completely drained, it will take a few minutes to continue charging to see the light on. Please use certified adapter product for charging.

Notice

1. Let the device static for 5-8 minutes after filling, to make sure the cotton is fully saturated.
2. Dispose of the contents/container in accordance with local laws.
3. It is not recommended for minors and non-smokers.

Troubleshooting

1. If the device's battery can not be charged, check that the charger cord is fully connected to the Type-C port.
2. If aerosol is not emitted normally when puffing on the device:
 - a. Confirm that adequate charge remains in the battery.
If not, please charge as soon as possible.
If the product still does not work, email our customer service center at info@suorin.com for further assistance.

Safety Warnings:

- Nicotine is a highly addictive and toxic substance.
Use care when re-filling and handling this device and refilling the cartridges with e-liquid.
- For use with nicotine-containing e-liquids only. Not for use with high viscosity liquids, waxes, or oils, including THC oils, cannabidiol oils, or other controlled substances. Use with such substances may lead to malfunction of or damage to the product and can result in severe illness or injury.
- When refilling the cartridge with nicotine-containing e-liquid, avoid contact with skin and eyes.

If accidental contact with the skin or eyes occurs, rinse with plenty of water and contact a medical professional if irritation occurs or persists.

- Keep the device, all cartridges, and all e-liquid containers out of the reach of children and pets, as this product presents both a poisoning and choking hazard.
- In the event of accidental ingestion of e-liquid, seek help from your local poison control center immediately
(in USA region please contact 1-800-222-1222)
- Only charge the device indoors.
- Do not use this device or its cartridges with cartridges, batteries, coils, chargers, or other replacement parts from other manufacturers, as such may lead to an increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death. Use only Suorin-brand compatible replacement parts.
- Do not attempt to disassemble or modify this product in any way, as such may lead to malfunction of or damage to the product, increased risk of explosion, fire, or nicotine poisoning, and can result in severe illness, injury, or death.
- Do not use this product when flammable materials, liquids, or gases, including oxygen, are present or in use.
- Do not use this product if it appears damaged, has been modified, disassembled, or immersed in water.
- When traveling on an airplane or other pressurized environment, remove the cartridge from the device and store it upside-down to avoid leaking of e-liquid from the cartridge.

- Do not use this product with an empty cartridge, as such may result in increased exposure to harmful substances.

HEALTH WARNINGS:

- This product is intended for use by existing cigarette smokers only and should not be used by non-smokers or individuals under the legal age to purchase e-cigarettes or vapor products in their respective jurisdictions.

- This product should not be used by individuals with high blood pressure, heart disease, diabetes, respiratory illness or disease, asthma, gastritis, gastric ulcer, duodenal ulcer, gastro-esophageal reflux disease or who are allergic to any of the listed ingredients.

This product should not be used by pregnant, suspect they may be pregnant or plan to become pregnant, or who are breastfeeding. Exposure to nicotine is harmful to fetal and infant development.

- You should discontinue use of this product and seek the attention of a medical professional if you feel dizzy, faint, or experience difficulty breathing while or immediately after using this product.

- Possible effects of nicotine consumption include: Coughing, headache, irritation of the mouth and throat, (nasal congestion, aphthous ulcers, sore throat, anxiety, insomnia, depression, discomfort, nausea, dry mouth, heartburn, aching joints, diarrhea, meteorism, allergy skin eruption, shortness of breath, labored breath, tightness of the chest, swelling of the face, tongue and lips),

feeling thirsty, hiccups, chest pain, fever, irregular or increased heartbeat, dizziness, and sleepiness.

Seek the advice of a medical professional if you experience any of these symptoms.

•Possible symptoms of a nicotine overdose include: nausea, salivation, abdominal pain, diarrhea, sweating, headache, dizziness, hearing problems, weakness, and palpitation. Discontinue use and seek immediate medical attention if you experience any of these symptoms while or shortly after using this product.



Shenzhen Youme Information Technology Co.,Ltd.

E-mail:info@suorin.com

Web:www.suorin.com

Instagram:@Suorinofficial

Add:201, Building B, Dianlian technology building,
Nanhuan Avenue, Mashantou Community, Matian street,
Guangming District, Shenzhen China





SUORIN

CERTIFICATE

This product is approved to be qualified for delivery

Product Name: _____

Model No.: _____

Inspector: _____

Date of Manufacture _____